

Comandos

Porta: 5011

Configuração inicial:

O seguinte equipamento é melhor configurado via cabo, caso precise baixar o configurador, acesse: <https://www.suntechdobrasil.com.br/suporte#downloads>

OBS: o campo xxxxxx deve ser substituído pelo ID do equipamento

Comando 1: NTW;xxxxxx

;02;0;apn;usuario;senha;dns.smartgps.com.br;5011;dns.smartgps.com.br;5011;; (Comando para conexão do rastreador na plataforma)

Necessário alterar o comando de acordo com a APN utilizada

“ ST8310 - para subir na plataforma desabilitar o AGPS MODE

The screenshot shows a configuration interface for a GPS device. The interface is divided into several sections with tabs at the top: ALERT_CONFIG1, ALERT_CONFIG2, ASSIGN HEADER(STT), ASSIGN HEADER(ALT), Report Mapping, and Change. Below these are sub-tabs: Geofence Config, Polygon Geofence, Cerca eletrônica circular, String de comandos, and Diagnóstico. The main area contains various configuration fields and dropdown menus. A blue arrow points to the 'AGPS Mode(1014)' dropdown menu, which is currently set to 'Desabilitar'.

Field	Value
Authentication(1000)	CHAP
APN(1001)	allcom.br
User ID(1002)	allcom
User Password(1003)	allcom
PIN Number(1004)	
Server IP(1005)	dns.smartgps.com.br
Server Port(1006)	5011
Server Type(1007)	TCP
Backup Server IP(1008)	dns.smartgps.com.br
Backup Server Port(1009)	5011
Backup Server Type(1010)	TCP
UDP ACK(1011)	0
Device Port(1012)	0
Connection Type(1013)	Keep Connected
Keep Alive Interval(Min.)(1060)	10
TCP Keep Alive(1070)	Habilitar
TCP Keep Alive Idle Time(Sec.)(1071)	600
Jamming Detection(1061)	Desabilitar
Check distance for jamming(Meter.)(1062)	500
Check no GPS duration for jamming(Sec.)(1063)	300
Scanning Band Mode(1016)	Country(Brazil)
SAT OUT(1052)	Desabilitar
SAT Delay(Sec.)(1053)	60
Scan Mode(1054)	Cat 1 & GSM
AGPS Mode(1014)	Desabilitar
AGPS Server URL(1015)	http://agps.stdobrasil.com

Revision #20

Created 4 September 2023 17:23:53 by Smartgps

Updated 28 May 2024 20:50:17 by Smartgps